 





To create a note

 
1. Tap **Application Drawer** > **Note Pad**.
2. Enter the notebook name.
3. Enter **Page title** for the new notebook as shown.

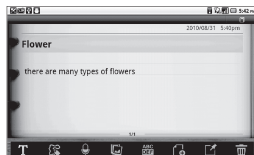


4. Enter contents of your notes below.



- Tap  to use paint tool to make drawings on your notes.
- Tap  to insert images from gallery or insert image from camera to your notebook.
- Tap  to add audio recordings to your notes.

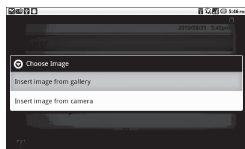


4. When you are done, press  to return to Note Pad screen. Your notebook is automatically saved.

8.26 Phone

Use **Phone** to make phone calls or manage contact list.

To make a voice call

1. Tap **Application Drawer** > **Phone**.
2. Tap the phone number on the keypad.
3. Tap  to erase a wrong number.

Tap and hold  to erase the entire number.

NOTE: To call a contact, tap the contact from the list.

4. After entering the phone number, tap .
5. To end the call, tap .

To answer a call

To answer a call, tap  and swipe right wards.



8.27 Places

Places is a location based application that helps you find the places and things around you. Local information available includes restaurants, coffee , bars, hotels, attractions, ATMs, gas stations.This application also helps you get where you are going with maps and directions.

Tap **Application Drawer** > **Places**.

8.28 Rss Reader

 
Use **RSS Reader** to get live update of your favorite web sites.

To add a new RSS Feed

1. From Home screen, tap **Application Drawer** > **RSS Reader**.
2. Tap **Menu** > **New feed** to add a Feed URL.
3. Select **OK** to confirm.

To update RSS Feed

1. From Home screen, tap **Application Drawer** > **RSS Reader**.
2. Tap **Menu** > **Update all** to update RSS feeds.

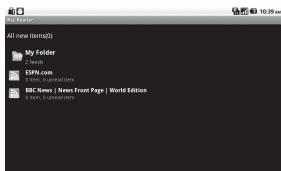

8.29 Settings

In the **Settings** menu, you can view and make adjustments for wireless & network settings, call settings, phone general settings and security settings etc.

8.30 SIM Toolkit

Directly connect to and use services provided by your mobile service provider.

Tap **Application Drawer** > **SIM Toolkit**.

 
8.31 Talk

Talk is Google's instant messaging program.

To sign in to Google Talk

1. Tap **Application Drawer** > **Talk**.
2. Tap **Create** or **Sign in** your Google account.
3. Follow the on screen instructions to login or create your Gmail username and password.
4. Once logged in, you can begin using Google Talk and do any of the following:

- View friend's list: Tap **Menu** > **All friends**
- Add friends to friend's list: Tap **Menu** > **Add friends**
- To block a person: Tap **Menu** > **More** > **Blocked**
- To invite a person to your chat: Tap **Menu** > **More**>**Invites**
- To configure Google Talk settings: Tap **Menu** > **Settings**
- To Sign out: Tap **Menu** > **Sign out**.
- To view terms and privacy: Tap **Menu** > **Settings**> **Terms & Privacy**

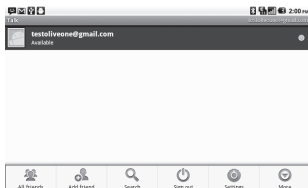


8.32 Videos

You can playback the video clips captured with this device. See "Videos and Photos " on page 29.

8.33 Voice Dialer

 Read and record predefined texts to be recognized and used by this device for voice dialing, finding a contact and others.

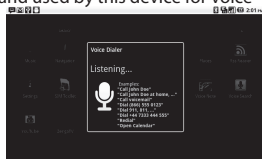

1. Tap **Application Drawer > Voice Dialer**
2. When the application prompts you to speak an available command from the menu, say the command in normal conversation tone and speed.



- If the application recognizes the command you said, it may prompt you for a confirmation, select **OK** or **Cancel**.

8.34 Voice Note

 
To record a voice note

- Tap **Application Drawer > Voice Note**.
- Tap **Menu > Record**. The recording screen is displayed.
- Select  to record voice. Select  to stop recording

To play a voice note

- Tap **Application Drawer > Voice Note**.
- A list of voice notes are displayed. Select a voice note to play.


The voice note is played with Music player.

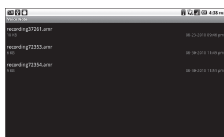

8.35 Voice Search

Speak your query to search item on Google, or for applications or contacts on your device.

 - Tap **Application Drawer > Voice Search**.
- A dialog opens, prompting you to speak the words that you want to search for.
- When you are finished speaking, **Voice Search** analyzes your speech and displays the results of your search. If **Voice Search misunderstands you**, Quick Search Box presents a list of similar -sounding search terms.

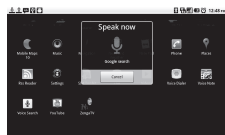


8.36 YouTube

YouTube is an online video streaming service that allows you to view, search, and upload videos.

To start using YouTube

 - Tap **Application Drawer > YouTube**.
- Videos are grouped into categories, such as Featured, Most popular, Most viewed, Top rated, and more. Tap a category to see the available videos for that category.
- Tap a video to play it.

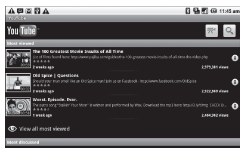


8.37 Zenga TV*


Zenga TV application allows you to watch the LIVE TV, and other videos on your device.

To open the application, tap **Application Drawer > Zenga TV**.

 The first and main screen shows the main information available in the application that appears at the start up of the application.

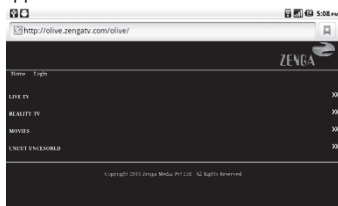


 To use the application user need to register in the Zenga TV web site. To see the video and Live TV on Zenga TV, user has to create his /her account. Below is the Register screen .

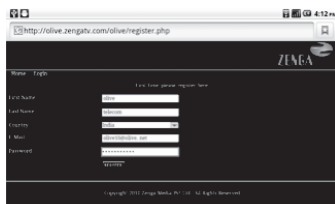

After creating the account user can Login with E-mail and password and able to see the contents available on the Zenga web site.

 Below is the Login screen.

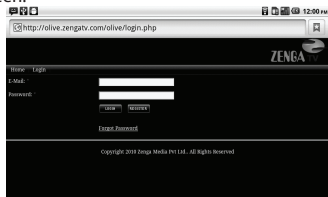

Chapter 9 : Managing Your Device

9.1 Device Settings

Tap **Application Drawer** > **Settings** to view and adjust the settings of this device.

Application	Description
Wireless & networks	
Airplane mode	Disable all wireless connections.
Wi- Fi	Tap to turn on/off.
Wi-Fi settings	Set up and manage wireless access points.
Blue Tooth	Tap to turn on/off.
Bluetooth settings	Manage connections, set device name, and discoverability of the device.
Tethering & portable hotspot	Share your phone's mobile data connection via USB a or as portable Wi Fi hotspot.
VPN settings	Set up & manage Virtual Private Networks (VPNs).
Mobile networks	Set options for roaming, networks, and Access Point Names.
Call settings	
Fixed Dialing Numbers	Managed fixed dialing numbers.
Vicemail	Set voice mail number.
Other call settings	Call forwarding, call barring and additional settings
Sound	
Silent mode	Turn silent mode on/off. All sounds except media and alarms are silenced.
Vibrate	Set your desired choice from the options after taping.

Volume	Adjust ringtone, media, and alarm volume.
Phone ringtone	Set your default incoming call ringtone.
Notification ringtone	Set your default notification ringtone.
Audible touch tones	Enable/disable sound when using dial pad.
Audible selection	Enable/disable sound when making screen selection.
Screen lock sounds	Play sounds when locking or unlocking the screen.
Haptic feedback	Vibrate when pressing soft keys and on certain UI interactions.

Display

Brightness	Adjust the brightness of the screen.
Auto-rotate screen	Switch orientation automatically when rotating the device.
Animation	Show animation when opening & closing windows.
Screen timeout	Adjust the delay before the screen automatically turns off.
Resolution compatibility	Check to enable resolution compatibility
G-Sensor Calibration	Set the g-sensor calibration for the device.
E-Compass Calibration	Set the e-compass calibration for the device.

Location & security

Use wireless networks	See location in applications (such as maps) using the wireless networks.
Use GPS satellites	Check to enable GPS satellites.
Use assisted GPS	Use server to assist GPS.
AGPS Settings	Adjust AGPS settings. This option is only available if Enable GPS satellites is activated.
GPS Ephemeris Auto Download	Enable/Disable to download Ephemeris updates from the server.
Set up Screen unlock	Tap to set the lock screen with a pattern, PIN, or password.
SIM card lock	Tap to set up SIM/USIM card lock or change SIM/USIM pin.

Passwords	Check the box to show password as you type.
Device Administration	Add or remove device administrators.
Credential storage	Use secure credentials, install from SD card, set or change password for credential storage, or clear credential storage.

Applications

Unknown sources	Allow installation of non market applications.
Manage applications	Manage and remove installed applications.
Running services	View and control currently running services.
Development	Set options for application development.

Accounts & sync

Background data	Check to enable sync, send, and receive data for all applications.
Auto Sync	Check to automatically sync data with applications.
Manage accounts	Tap an account to configure synchronization settings for Calendar, Contacts, and Gmail or tap to add an account.

Privacy

Back up and Restore	Check to back up and restore the settings and other application
Personal data	Erases all data on the device.

SD card & phone storage

SD card	Show available memory card storage and total memory card space.
Unmount SD card	Unmount the memory card for safe removal.
Format SD card	Format the SD card.
Internal phone storage	Show available phone storage.

Search

Google search	Manage search settings and history etc..
Searchable items	Choose what to search on the phone
Clear shortcuts	Clear shortcuts to recently chosen search suggestions.

Language & keyboard

Select language	Select language for this device.
TouchPal	Set on screen keyboard settings.
User dictionary	Add user preset words to the dictionary.

Voice input & output

Voice input	Set the voice recognizer settings.
Voice output	Set the text to speech settings.

Accessibility

	Configure the settings for the downloaded application with an accessibility feature
Power button	Set to end a call by pressing the power button

Date & time

Automatic	Check to use network provided values.
Set date	Tap to set date for this device.
Select time zone	Set time zone of your current location.
Set time	Tap to set time for this device.
Use 24 hour format	Set the clock to 24 hour format.
Select date format	Set the preferred date format.

About phone

 
View legal information, device status and software version etc.

9.2 Changing Basic Settings


Date and Time

To set the date and time

1. Tap **Application Drawer > Settings > Date & Time**
2. Tap **Set date** to set the date.
 - To adjust the date, tap the month, day, and year field, and tap **+or-** to increase or decrease the value. Tap **Set** to apply the values.
 - To change the date format, tap **Select date format**, and select from the List

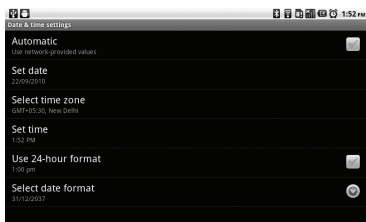

 
3. Tap **Select time zone** to select the time zone from the list.
4. Tap **Set time** to set the time.
 - To adjust the time, tap the hour, minute, and AM/PM field, tap + or - to increase or decrease the value. Tap **Set** to apply the values.
 - To use 24 hour format, tap **Use 24 hour format**

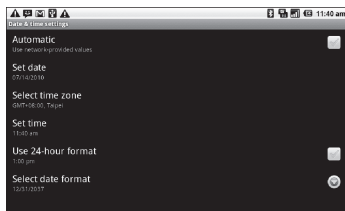

Setting Alarms

To set the alarm

 1. Tap **Application Drawer** > **Clock**.
2. Tap alarm icon to enter set alarm submenu.
3. To add an alarm, tap **Add alarm**.
4. Set the time, and tap the other options to change
5. After all settings are completed, tap **Done**

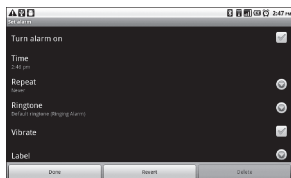

Display Settings

The display settings of this device affect the battery and external power level

To turn off backlight when the device is idle

1. Tap **Application Drawer** > **Settings** > **Display** to enter the submenu.
2. Tap **Screen timeout**.
3. Select from the screen timeout list. Your setting is automatically saved.

To adjust brightness

1. Tap **Application Drawer** > **Settings** > **Display** to enter the submenu.
2. Tap **Brightness**.
3. Drag the **Brightness** slider to adjust brightness settings, and tap **OK**.

To change the screen orientation

1. Tap **Application Drawer > Settings > Display** to enter the submenu.
2. Tap **Auto-rotate screen** to check the box to automatically switch the screen orientation when rotating the device.

Ring Settings

You can assign a ringtone for various events such as an incoming call, new message received, among others.

To change the ring tone of an incoming call

1. Tap **Application Drawer > Settings > Sound**.
2. Tap **Phone ringtone**.
3. Select the desired ringtone from the lists.
4. Tap **OK** when finished.

To change the ring tone of other events

1. Tap **Application Drawer > Settings > Sound**.
2. Tap **Notification ringtone**.
3. Select the desired ringtone from the lists.
4. Tap **OK** when finished.

9.3 Using Wireless & networks

Wireless & networks allows you to manage Wi Fi, Bluetooth, airplane mode and mobile networks etc.

1. Tap **Application Drawer > Settings > Wireless & networks**.
2. To turn on or off **Wi-Fi, Bluetooth** or **Airplane mode**, simply tap their corresponding bars.
3. To change connection settings, tap the corresponding function settings, then select the setting to change.

9.4 Protecting Your Device

You can protect this device from unauthorized users by requiring the PIN code or entering a password.

Enable or Disable SIM /USIM card PIN

When PIN code is enabled, you are required to enter the PIN code before making a call.

1. Tap **Application Drawer > Settings > Location & security**.
2. Tap **Set up SIM card lock**.
3. Tap **Lock SIM card** to use PIN to use the device. Check to enable, uncheck to disable.
4. Enter the current PIN code.
5. To change the PIN code, tap **Change PIN**.
6. Enter the old PIN code.
7. Enter the new PIN code and confirm.